

Accessories

Assist Bars



Assist Bar	Used For Amtec Nuts
801.101.125.065	K-7.101L to K-7.202L
801.101.128.095	K-6.104 to K-6.206L
	K-7.103L to K-7.206L
801.101.200.127	F-8.405 to F-8.1011
	F-9.405 to F-9.1011
	K-6.107L to K-6.211L
	K-7.107L to K-7.410L
	H-2.405 to H-2.1011
	H-3.405 to H-3.1011
801.101.280.127	F-8.412 to F-8.1015
	F-9.412 to F-9.1015
	K-6.212L to K-6.215L
	H-2.412 to H-2.1015
	H-3.412 to H-3.1015
801.101.203.190	F-8.415.5 to F-8.1016.1
	F-8.411.017 to F-8.1015.517
	F-9.415.5 to F-9.1016.1
	F-9.411.017 to F-9.1015.517
	K-6.216L to K-6.217L
	H-2.415.5 to H-2.1016.1
	H-3.415.5 to H-3.1016.1

Assist Bar	Used For Amtec Nuts
801.101.305.190	F-8.417.0 to F-8.1019.5
	F-9.417.0 to F-9.1019.5
	F-8.417.017 to F-8.1019.517
	F-9.417.017 to F-8.1019.517
	H-2.417.0 to H-2.1019.5
	H-3.417.0 to H-3.1019.5
	GX-4.415.5 to GX-4.1018
	GX-5.415.5 to GX-5.1018
801.101.360.190B	F-8.1020.0 to F-8.1023.0
	F-8.420.017 to F-8.1020.107
	F-9.1020.0 to F-9.1023.0
	F-9.420.017 to F-9.1023.017
	H-2.1020.0 to H-2.1023.0
	H-3.1020.0 to H-3.1023.0
	GX-4.1019 to GX-4.1025
	GX-5.1019 to GX-5.1025

Use assist bars to retract the thrust ring into the nut body after production and before removing the clamp.

The assist bar also helps remove nuts on sticky arbors while preventing hammering or other costly damage to clamps.

See nut operating instructions for more information on using Amtec assist bars.

